



- 型號：DK2108SZ
- 結構：機械式結構
- 軸：Cherry MX 機械軸
- LED：單色LED燈
- 鍵帽材質：ABS 或 PBT
- 印字技術：二色成形 或 雷射雕刻 或 熱昇華
- 尺寸：442 x 139 x 41 mm
- 重量：1.2kg
- 產地：中國

▲ 確切規格每個地區可能會有不同，詳細諮詢各地代理商。

鍵盤特別功能

- USB輸出字元加速功能
- 鎖定Windows鍵狀態
- USB N-Key Rollover全鍵無衝功能

Fn +	Esc	開啟/關閉Function mode模式	必須壓住1秒鐘切換
	F1~F4	調整首字延遲時間	
	F5~F8	調整字元重複頻率	
	F10	開啟/關閉鎖住Windows鍵功能	必須壓住1秒鐘
	F12	開啟/關閉 USB N-Key Rollover功能	必須壓住1秒鐘
	左Ctrl + 右Ctrl	將鍵盤恢復出廠設定	必須壓住5秒鐘

重點提示：

只有在「Function mode模式」下才能進行切換USB輸出字元加速功能、Windows鍵狀態以及N-key Rollover功能，在一般模式下無法立即切換。

燈光操作模式

Fn + F9

- 第一次：100%全亮模式
- 第二次：呼吸燈模式
- 第三次：波浪模式(由左而右)
- 第四次：波浪模式(由上而下)
- 第五次：蛇形跑馬燈
- 第六次：兩滴模式
- 第七次：單點亮模式
- 第八次：爆炸模式
- 第九次：極光模式
- 第十次：關閉背光

▲ 以上部分模式，皆可以透過下列操作來進行細節調整

- Fn + 1~7：選擇1~7階亮度
- Fn + 0：關閉所有背光
- Fn + ↑：增加LED亮度
- Fn + ↓：降低LED亮度
- Fn + S：儲存當前燈光效果

記憶區域背光功能

- Fn + F11：開啟/關閉CM1
- Fn + PrtSc：開啟/關閉 CM2
- Fn + Scroll Lock：REC1，錄製CM1設定
- Fn + Pause：REC2，錄製CM2設定

操作過程：

1. 按下Fn + Scroll Lock為設定CM1的設定，若按下Fn + Pause則是設定CM2的設定。
2. 當進入錄製模式後，按下按鍵即可點亮按鍵，反之則取消該按鍵背光。
3. 當完成錄製後，按下Scroll Lock結束CM1錄製；按下Pause結束CM2錄製。



- Model Name: DK2108SZ
- Type: Mechanical Keyboard
- Switch: Cherry MX
- LED: Single color LED
- Keycap Material: ABS or PBT
- Legend printing: Double-Shot or Laser Engraved or Dye-Sub
- Dimensions: 442 x 139 x 41 mm
- Weight: 1.2kg
- Production: China

▲ For keyboard's specs and details, please contact our local distributors.

KEYBOARD SPECIAL FUNCTIONS

- USB Repeat Acceleration
- Windows lock feature
- USB N-Key Rollover functions

Fn +	Esc	=	Function mode On/Off	Must Hold for 1 sec
	F1~F4		Adjust USB Delay Time	
	F5~F8		Adjust USB Repeat Rate	
	F10		Windows Lock On/Off	Must Hold for 1 sec
	F12		USB N-Key Rollover On/Off	Must Hold for 1 sec
	左Ctrl + 右Ctrl		Reset to Factory Defaults	Must Hold for 5 sec

Note:

USB Repeat Acceleration, Windows lock and N-key Rollover functions can only be adjusted under "Function Mode".

LED LIGHTING MODES

Fn + F9

- First Mode: 100% Full Backlight mode
- Second Mode: Breathing Mode
- Third Mode: Wave Mode (left to right)
- Fourth Mode: Wave Mode (up to down)
- Fifth Mode: Snake Marquee Mode
- Sixth Mode: Raindrop Mode
- Seventh Mode: Reactive Mode
- Eighth Mode: Explosion Mode
- Ninth Mode: Aurora Mode
- Tenth Mode: Backlighting Off

▲ Users can adjust some modes with the following the key sequence.

- Fn + 1~7: Setting backlighting brightness (Level1~7)
- Fn + 0: Turn off all backlighting
- Fn + ↑: Increase brightness
- Fn + ↓: Decrease brightness
- Fn + S: Save backlight Mode

LED ZONE CUSTOMIZATION MODE

- Fn + F11: CM1 On/ Off
- Fn + PrtSc: CM2 On/ Off
- Fn + Scroll Lock: REC1
- Fn + Pause: REC2

Recording Steps:

1. Press Fn + Scroll Lock to record CM1, and Press Fn + Pause to record CM2.
2. When start recording mode, hit any keys on the keyboard, then will set thekey's light up.
3. To finish recording, press Scroll Lock to finish CM1 recording; press Pause to finish CM2 recording.